


Recommended DSP Crossover Settings - for active application

„SW 6509“

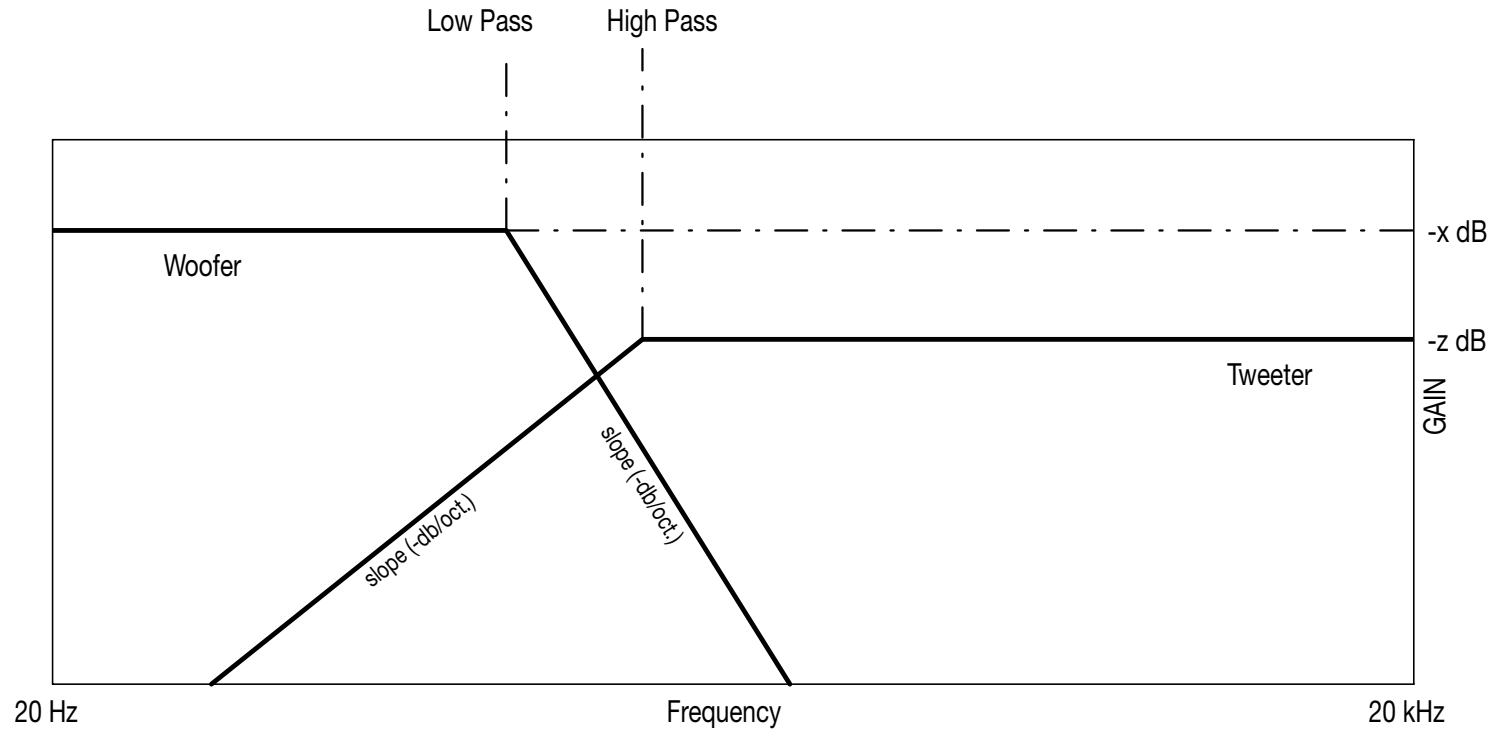

Q = 0.5 Typical Linkwitz-Riley
 Q = 0.7 Typical Butterworth
 Q = 1.0 Typical Tschebyscheff

Woofer					
	Low Pass (Hz)	Q	Slope (-dB/oct.)	Gain (dB)	Phase (degree)
SW 6509	150	1	12	0	0